

S MOD-03W/BPIP

Drive-R	20H
Drive-G	20H
Drive-B	20H
Coutoff-R	07H
Coutoff-G	07H
Cathode	0AH
Softcl	110H
PWL	00H
Scr Volt	OK

S MOD-04

Sub-Cout	3FH
UOC-TIN	1FH
Sub-Color	28H
Sub-Vol	3BH
Sub-BASS	00H
Sub-TREB	00H
NJWAGC	ON
NJWAGCCL	300mv
OSD VPOS	2AH
OSD HPOS	00H

S MOD-05

	TV/AV/ YCbCr			
	480i		576i	
	60i	120i	60i	100i
M587-CO	Zero	MANUAL	Zero	MANUAL
M58-Sreh	00H	00H	00H	00H
M59-Srev	00H	00H	00H	00H
M5C7-CIS	Manual	Manual	Manual	Manual
M5C-IW	77H	70H	77H	70H
M5D-IH	77H	77H	8FH	8FH
D62-HSPW	70H	64H	70H	74H
D63-HSES	83H	83H	A6H	A3H
D67-VSPL	04H	04H	04H	04H
D68-VSES	11H	11H	11H	1CH

注:总线数据 OSD 显示,机器将根据实际输入信号源和模式自动选择,每次只显示相应格式所对应的参数值。

S MOD-06

	TV/AV/YCbCr			
	480i		576i	
	60i	120i	60i	100i
UPSC72-HR	B3H	ACH	B0H	A9H
UPSC73-VR	86H	40H	87H	4CH

注:总线数据 OSD 显示,机器将根据实际输入信号源和模式自动选择,每次只显示相应格式所对应的参数值。