

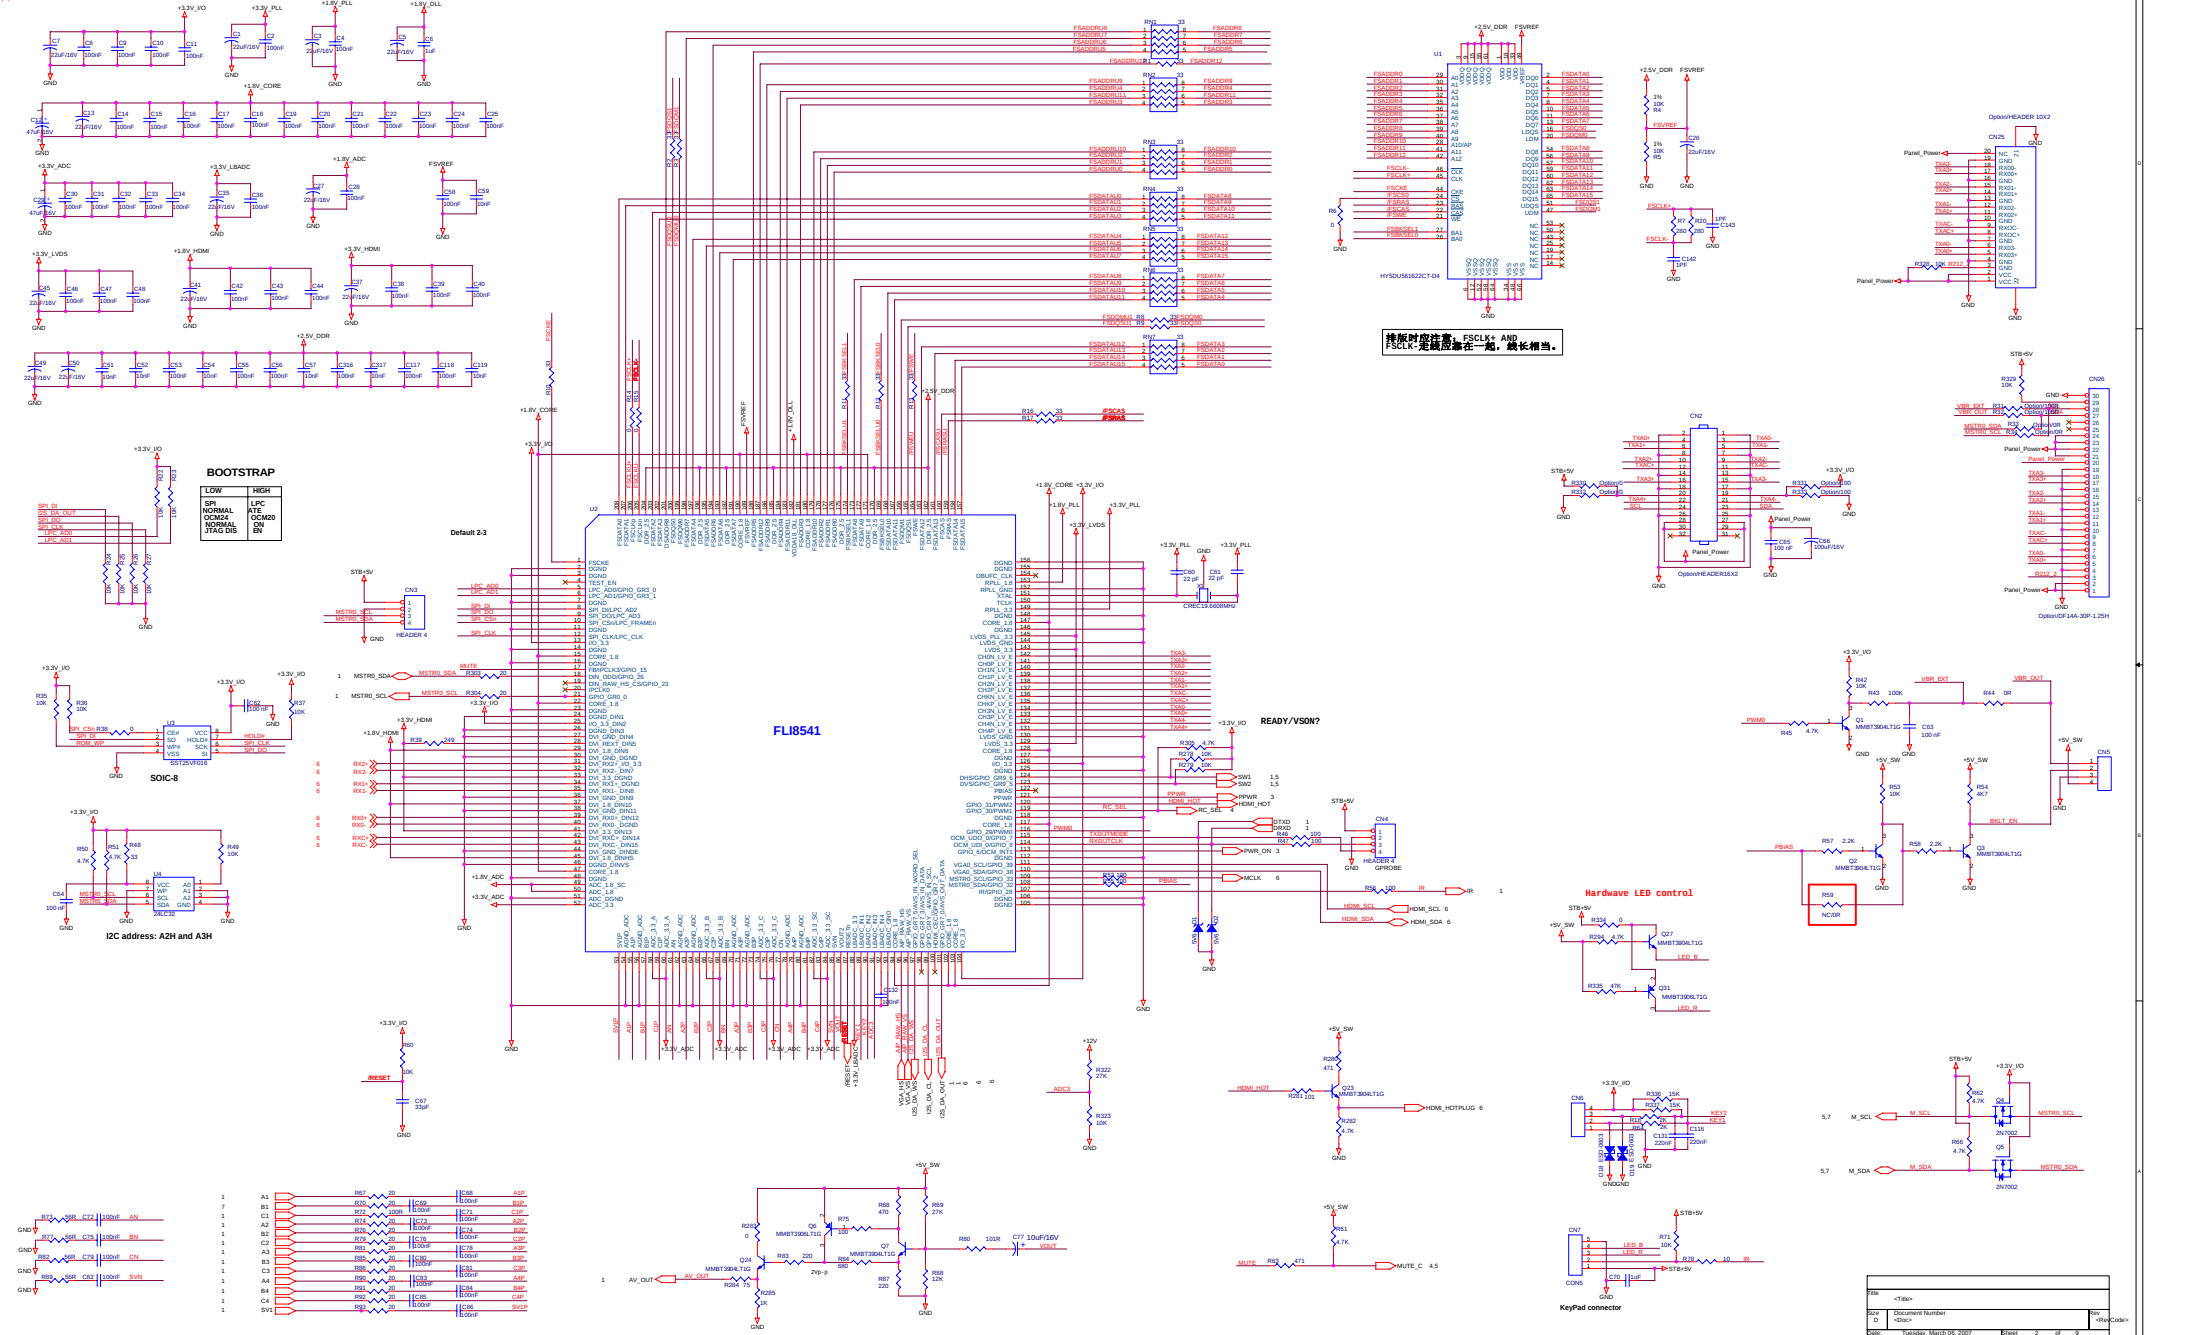
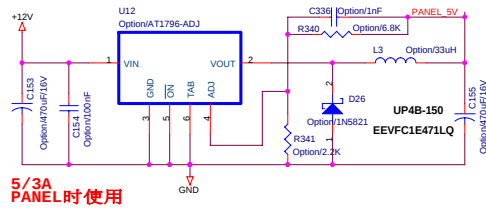
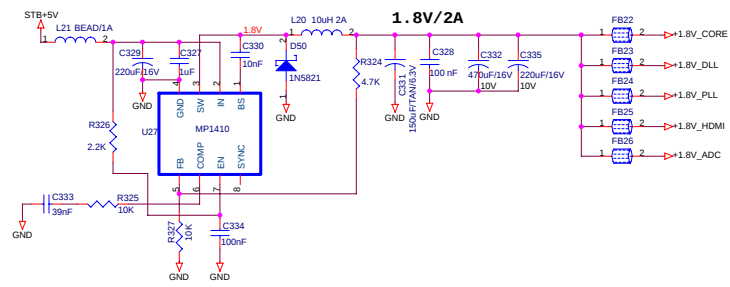
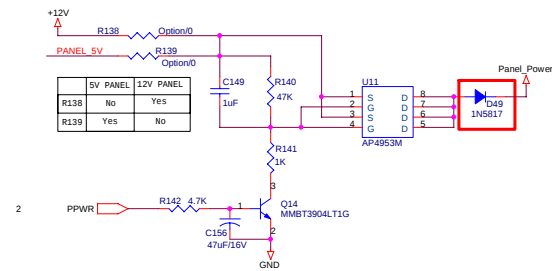
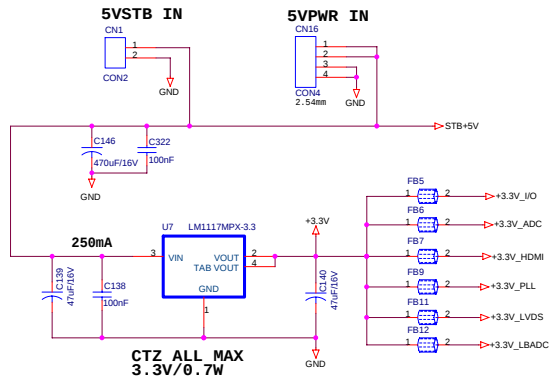



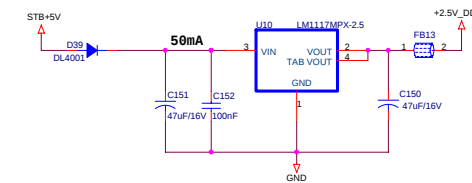


请照此注意，ESCLK+ AND ESCLK- 是必须加在一起，长度相当。

Rev	<Rev>
File	Document Number
Doc	Rev
Doc	Rev
Doc	Rev



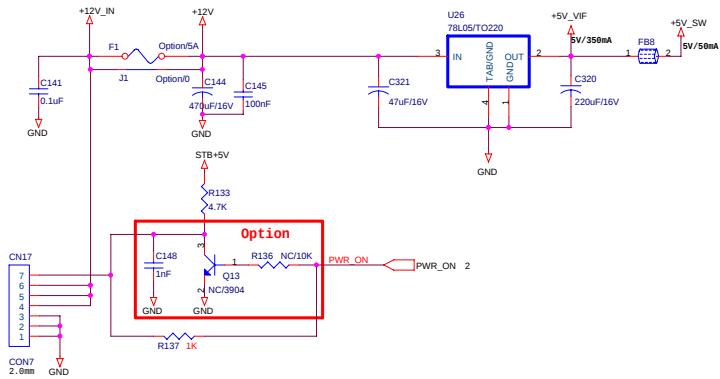


TV160 彩电维修资料网
http://www.tv160.net







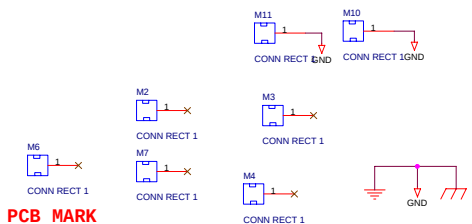
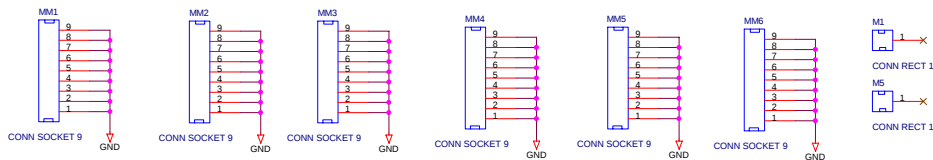


Title		<Title>
Size	Document Number	Rev
C	<Doc>	<RevCode>
Date:	Saturday, March 10, 2007	Sheet 3 of 9





功放电路

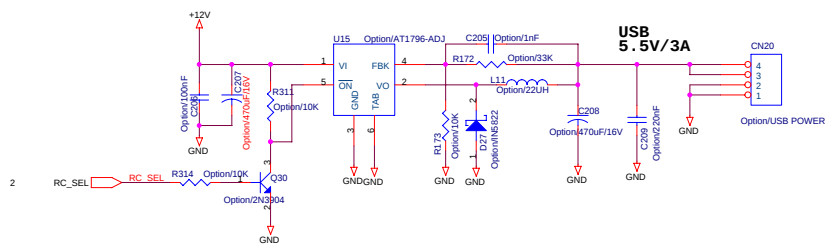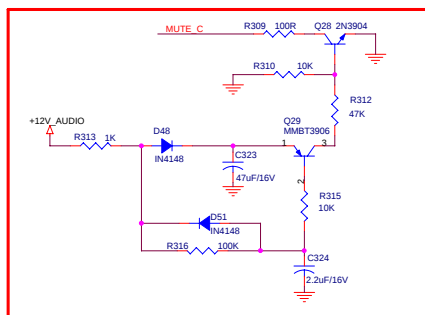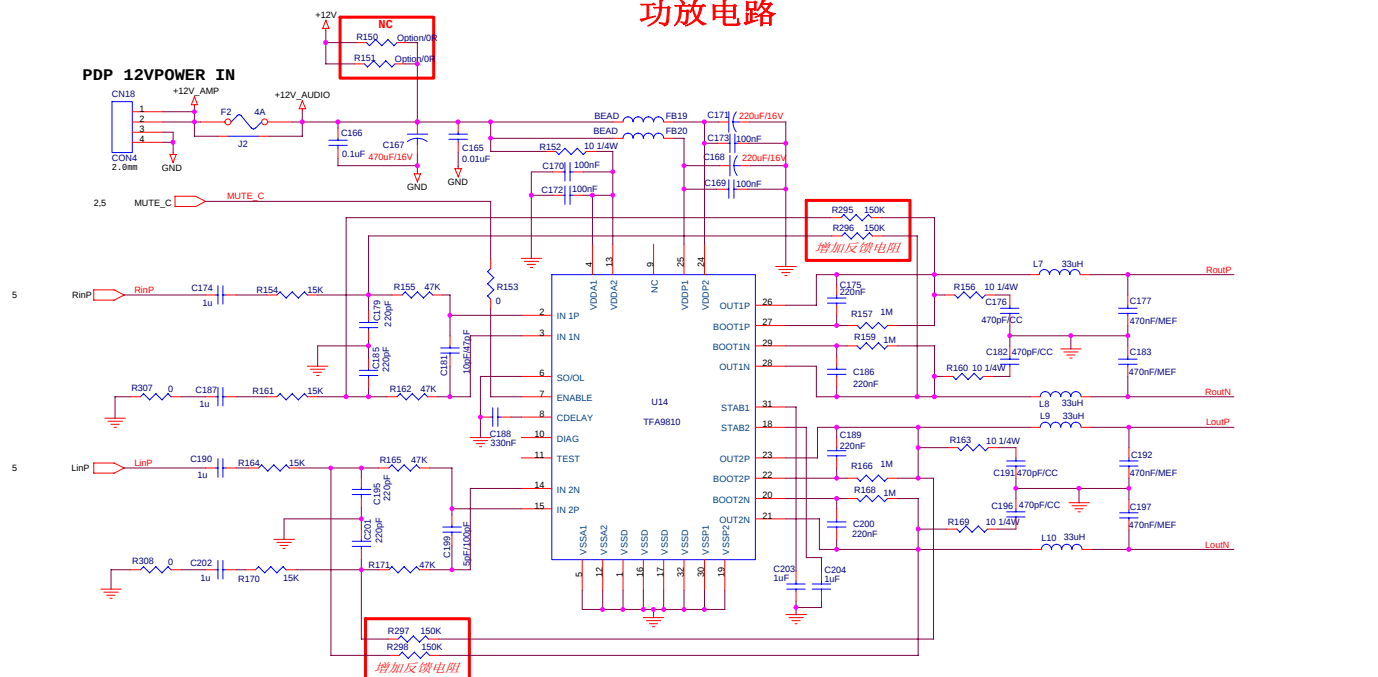


Title <Title>			
Size C	Document Number <Doc>		Rev <Rev Code>
Date:	Tuesday, March 06, 2007	Sheet	4 of 9

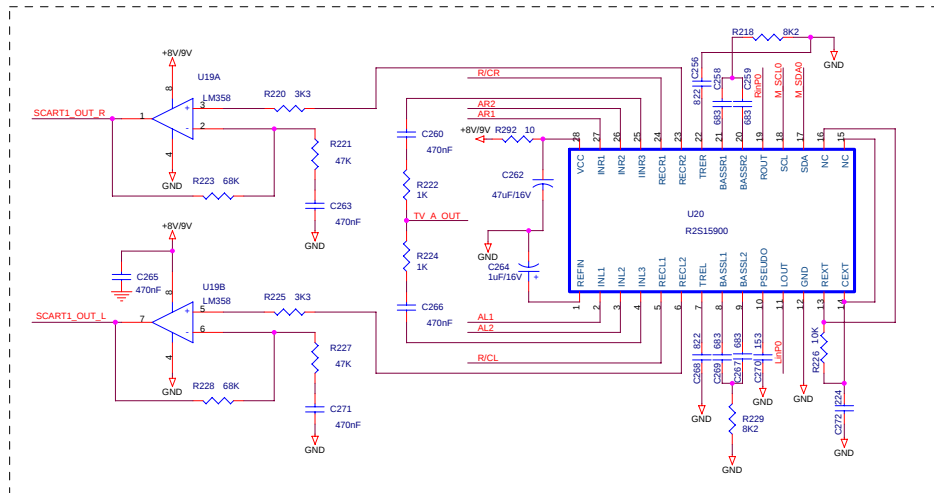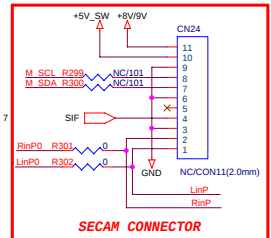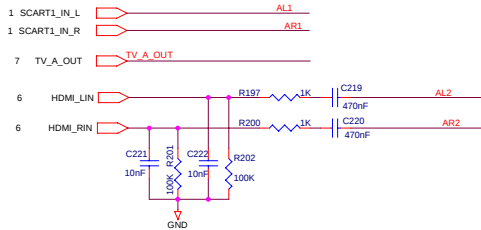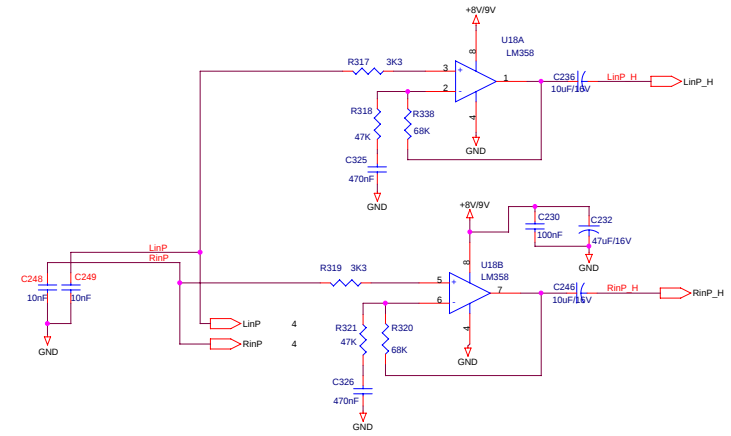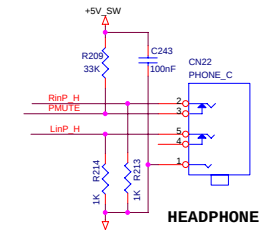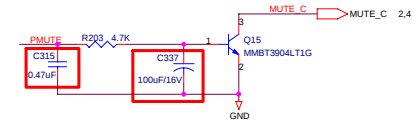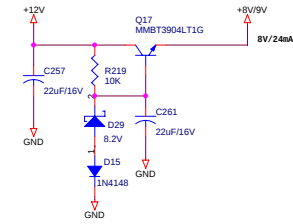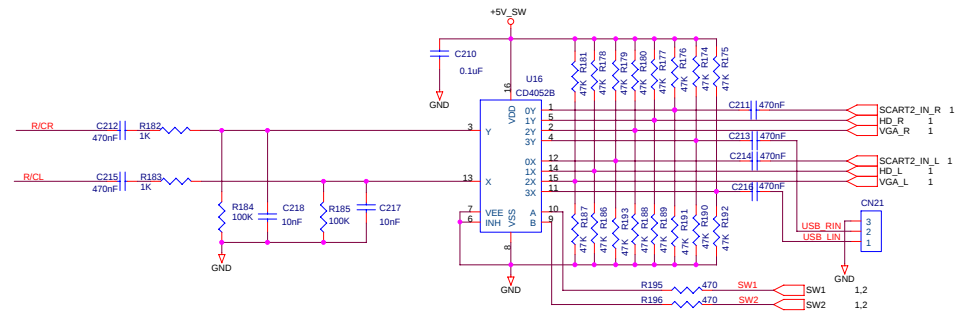

File	<Title>		
Size	Document Number	Rev	<RevCode>
C	<Doc>		
Date	Saturday, March 10, 2007	Sheet	5 of 9

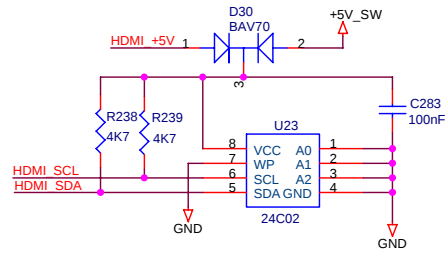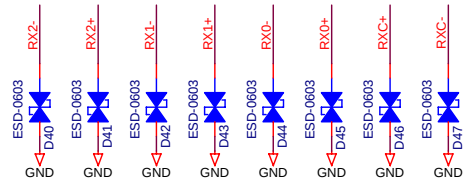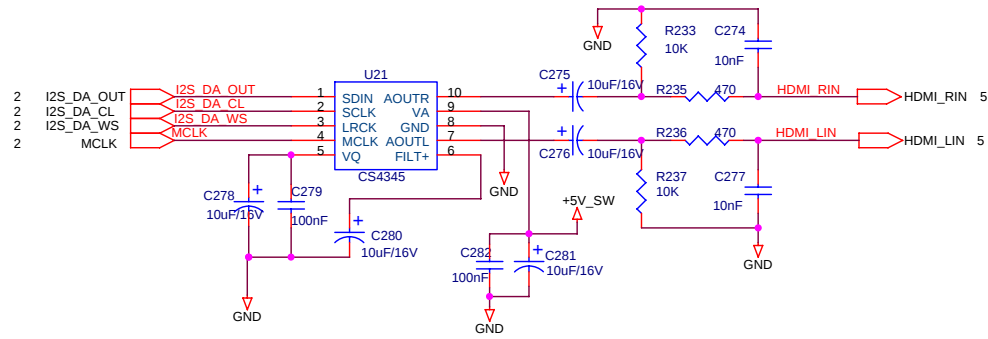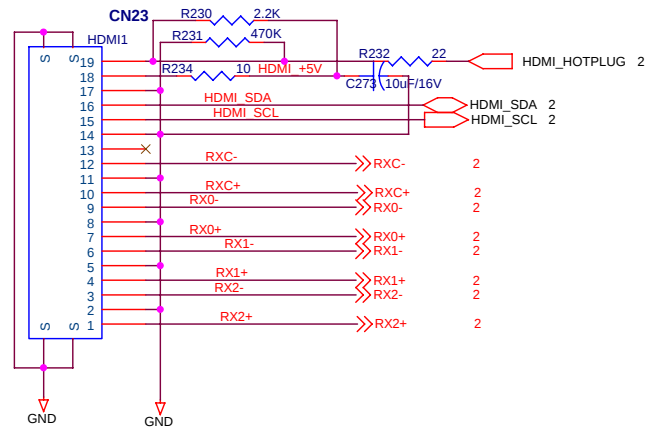

Title		
<Title>		
Size	Document Number	Rev
B	<Doc>	<RevCode>
Date:	Tuesday, March 06, 2007	Sheet 6 of 9

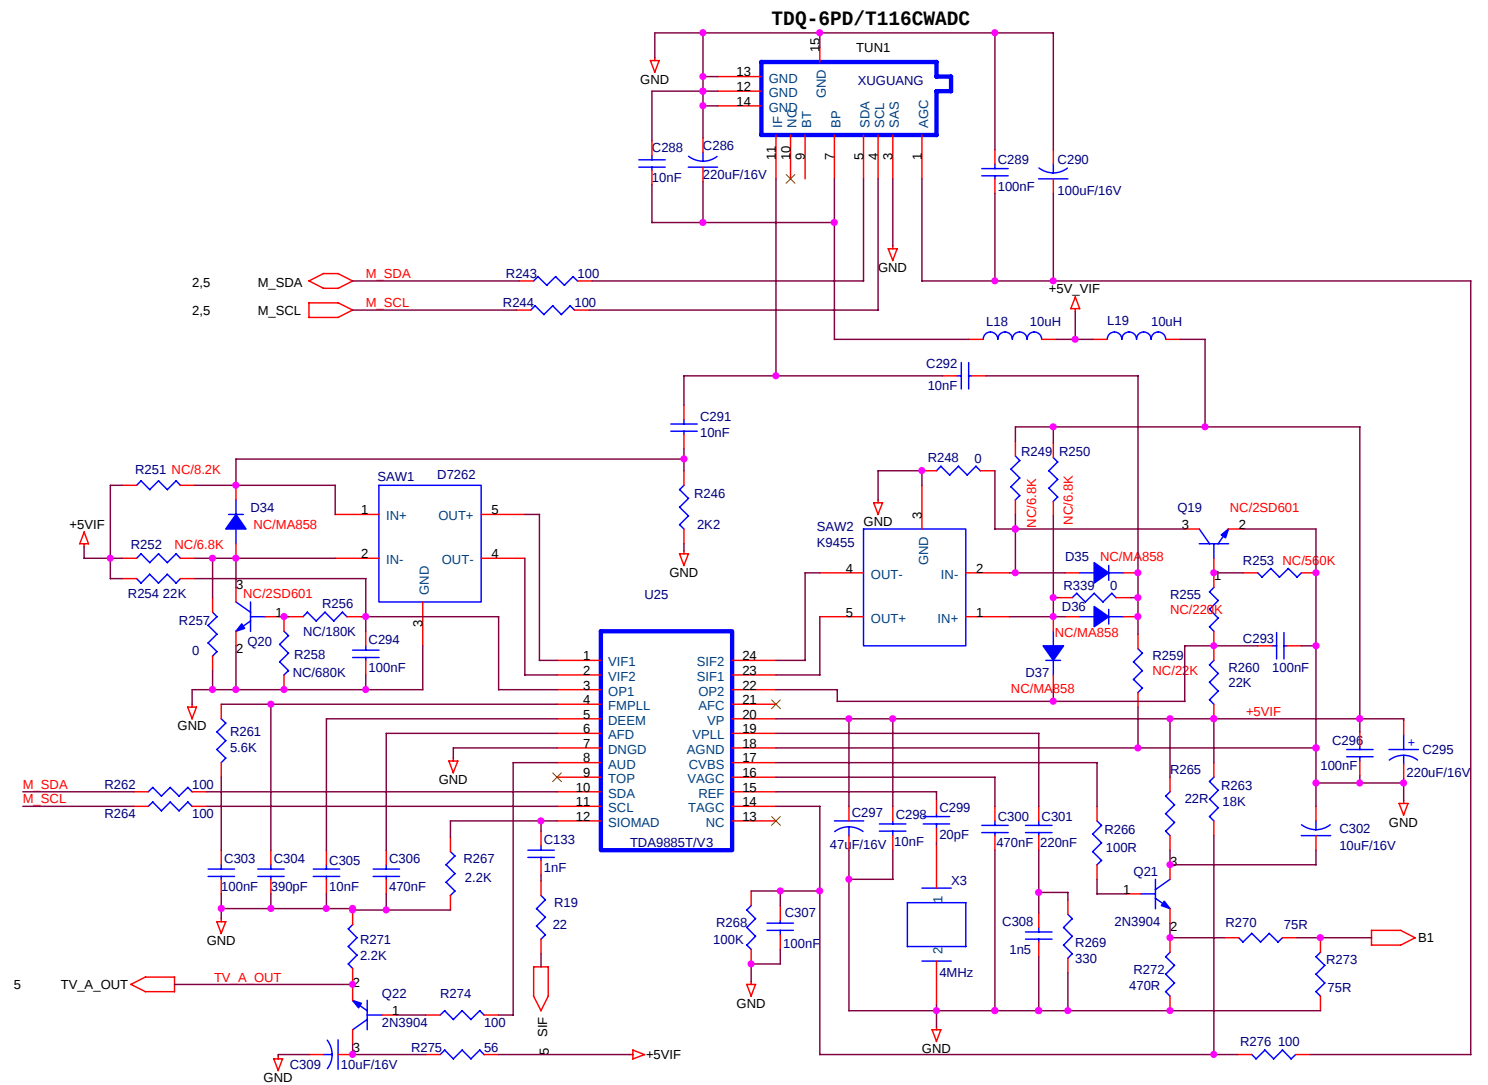

Title		
<Title>		
Size	Document Number	Rev
B	<Doc>	<RevCode>
Date:	Saturday, March 10, 2007	Sheet 7 of 9

序号	名称	功能脚	功能
1			
2	PWM0	PWM0	根据Pannel调节
3	PBIAS	GPI/O_32	
4	HDMI_HOT	PWM2	选择HDMI时输出高电平，其它为低电平。
5			
6	RC_SEL	PWM1	选择USB时输出高电平，其它为低电平。
7	PWR_ON	GPI/O_6	0-----STB 1-----NORMAL
8	PPWR	PPWR	0-----Pannel power down 1-----Pannel power on
9	MUTE	GPI/O_15	1-----Normal 0-----MUTE
10	KEY1	LBADC_IN1	
11	KEY2	LBADC_IN2	
12			
13			
14	SW1	GPI/O_GR9_6	Audio select SW1 SW2 0 0 AV_S AUDIO 1 0 YPbPr AUDIO 0 1 VGA AUDIO 1 1 USB AUDIO
15	SW2	GPI/O_GR9_5	
16	M_SCL	GPI/O_GR0_0	
17	M_SDA	GPI/O_26	

	TV_VIDEO	AV_CVBS	VGA(R G B)	YPbPr	YCbCr	Svideo
SV1						Svideo-Y
A1						Svideo-C
B1	TV_CVBS					
C1		AV_CVBS				
A2			VGA_R			
B2			VGA_G			
C2			VGA_B			
A3				Pr		
B3				Y		
C3				Pb		
A4					Cr	
B4					Y	
C4					Cb	

Title <Title>		
Size B	Document Number <Doc>	Rev <RevCode>
Date: Tuesday, March 06, 2007		Sheet 9 of 9